

USER MANUAL

PLEASE KEEP THIS FOR REFERENCE ONLY, WE ALSO HAVE A MORE DETAILED ONLINE KNOWLEDGE POST AVAILABLE BY SCANNING THE QR CODE HERE.



CHECK YOUR CONTENTS:








ELECTRIC SCOOTER


CHARGER

TOOL SET

BEGIN ASSEMBLING:

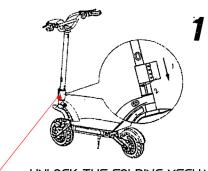

UNLOCK THE FOLDING MECHANISM AND SLIDE OVER THE FOLDING JOINT. MAKE SURE THE JOINT IS COMPLETELY COVERED BEFORE RE-TIGHTENING. WE RECOMMEND HAVING THE SCOOTER ON ITS KICKSTAND FOR INTIAL ASSEMBLY.

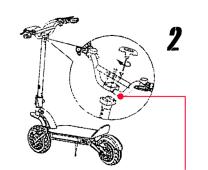

USING THE PROVIDED TOOLS, TIGHTEN THE 4 BOLTS ON THE HANDLEBAR. TIGHTEN EACH BOLT A FEW TURNS, THEN CONTINUE TIGHTENING UNTIL YOU REACH 75 INCH/POUNDS (8.5NM).



AFTER THE HANDLEBAR IS INSTALLED, FIND THE CONNECTORS CAREFULLY MATCH THEM BY COLOR. USING THE INDICATOR ARROWS ON BOTH SIDES CAREFULLY CONNECT THE TWO ENDS AND AVOID JAMMING ANY OF THE PINS.



INSERT THE BRAKE CABLE INTO THE HANDLEBAR. TURN THE FIXATOR SO THAT THE CABLE DOES NOT FALL TEST AND MAKE THROUGHLY SURE BOTH BRAKES ΛRE FUNCTIONING.

POWERING YOUR SCOOTER:






ONLY CHARGE THROUGH THE CHARGE PORT WITH A CHARGER DESIGNED FOR THIS PACK.

TREAT YOUR PLUGS WITH CARE.


ENERGY DENSE LITHIUM-ION DO NOT CHARGE INDOORS WITHOUT DIRECT SUPERVISION. IF YOU SUSPECT YOUR BATTERY IS DAMAGED, DO NOT CHARGE! DO NOT CHARGE IF YOUR CHARGE PORT OR POWER CORD IS WET!

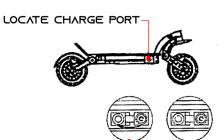

UNCOVER CHARGE PORT


FINISHED CHARGING!

MAKE SURE TO COVER WHEN

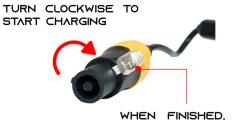

WHEN FINISHED, SLIDE LEVER BACK AND TURN COUNTERCLOCKWISE TO REMOVE

DIAGRAM & DETAILS:

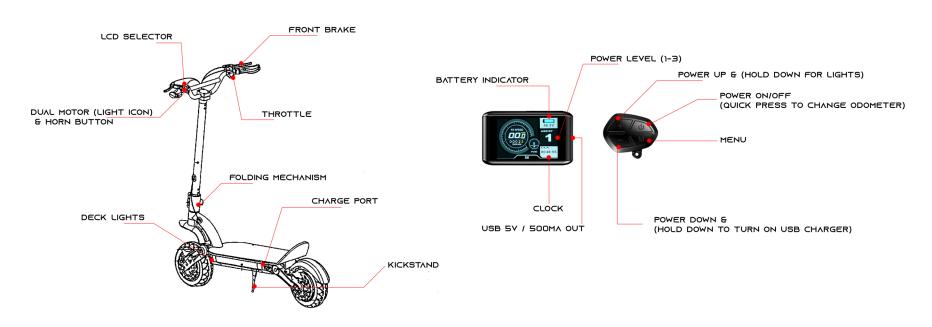



ALARM CAN ONLY BE SET IF THE LCD IS POWERED ON. ONCE THE ALARM IS SET IT WILL CONTINUE TO CHIRP UNTIL YOU PRESS THE

 * IF YOU SET THE ALARM, THE SCOOTER WILL NOT TURN ON UNTIL YOU PERFORM THE MASTER UNLOCK, MASTER UNLOCK CAN BE PERFORMED BY CLICKING THE LIGHTNING BOLT BUTTON 2X (UNTIL A CHIRP IS THE SCOOTER WILL TURN ON AT

BEFORE YOU RIDE:

- CHECK FOLDING MECHANISM CHECK TIRE PRESSURE (50 PSI)
- ☐ CHECK ALL BOLTS ARE SECURE AND TIGHTENED
- CHECK AND TEST BRAKES
- FULLY CHARGE BATTERY BEFORE RIDING
- ☐ CHECK FOR DAMAGE OR CORROSION
- ☐ FAMILIARIZE YOURSELF WITH BASIC RIDING SAFETY
- MAKE SURE PLUGS ARE SECURE
- WEAR PROPER SAFETY GEAR
- DO NOT RIDE IN RAIN

TO TURN ON:



PRESS THE LIGHTNING BOLT BUTTON TWICE UNTIL YOU HEAR A FAST CHIRP



IMPORTANT NOTES:

USE A SOFT WET CLOTH TO WIPE THE FRAME CLEAN. SCRATCHES CAN BE POLISHED WITH FINE GRIT ABRASIVE PAPER. DO NOT WASH YOUR SCOOTER WITH ALOCHOL, ACETONE, OR OTHER CORROSIVE OR VOLATILE SOLVENTS. THESE MAY DAMAGE COMPONENTS AND APPEARANCE OF YOUR SCOOTER. DO NOT

DO NOT STORE THE SCOOTER IN EXTREME COLD OR HOT TEMPERATURES. CHARGE OR DRAIN YOUR BATTERY UNTIL IT IS AT 50% FOR LONG TERM STORAGE. MAKE SURE TO CLOSE THE RUBBER CAP ON YOUR CHARGING PORT. DO NOT STORE OUTDOORS, AS YOU MAY DAMAGE YOUR ELECTRICAL COMPONENTS. MAKE SURE TO SET YOUR ALARM 'ON' TO PUT THE SCOOTER IN STANDBY MODE.

DO NOT PUNCTURE YOUR DECK OR BATTERY. REFER TO YOUR LOCAL LAWS FOR BATTERY RECYCLING. OPERTING AT COLDER TEMPERATURES CAN AND WILL AFFECT BATTERY PERFORMANCE, WE RECOMMEND WARMING YOUR BATTERY UP BEFORE RIDING IF YOU ARE EXTREME COLD TEMPERATURES (AKA NOT CALIFORNIA). DO NOT DISSASEMBLE OR SERVICE YOUR BATTERY.